


SÅDAN BRUGER DU DIN VORTEX™ PLUS

Kontrolpanel

Vi har designet kontrolpanelet til at være enkelt at bruge og let at læse.

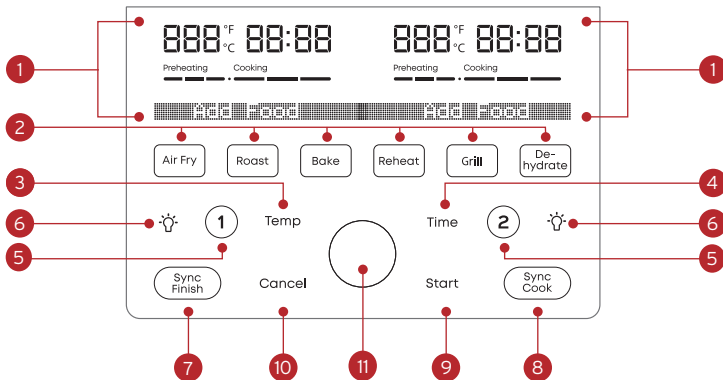

1. Left + Right Basket Status Display
 - Cooking temperature
 - Cooking time
 - Messages
 - Error codes
2. Smart Programmes
3. Temperature Control
 - Increase or decrease cooking temperature
4. Time Control
 - Increase or decrease cooking time
5. Left (1) + Right (2) Basket Selectors
6. Light
7. SyncFinish
 - Set separate programmes to end at the same time
8. SyncCook
 - Match right and left basket settings
9. Start
10. Cancel
11. Control Dial

Turning the sound On/Off

You can set notification sounds to ON or OFF.

- When in Ready or cooking modes, press and hold **Time** and **Temp** for 5 seconds until the display shows **Sound On** or **Sound Off**.

Error alerts cannot be turned off.

Choosing the temperature scale

You can display cooking temperature in either Fahrenheit or Celsius.

- When in Ready or Cooking modes, press and hold **Temp** for 5 seconds until the display shows °F or °C.

Reset Smart Programmes to original settings

Reset individual Smart Programmes

- Once you've selected the Smart Programme, press and hold that Smart Programme button for 3 seconds.

The Smart Programme's button blinks and the cooking time and temperature are restored to the factory default setting.

Reset all Smart Programmes

- With the cooker in Ready mode, press and hold the **Control Dial** for 3 seconds until the cooker beeps.

All Smart Programme cooking times and temperatures are restored to the factory default setting.

INITIAL SETUP

Unpack

1. Remove your new Vortex™ Plus from the box.
2. Remove all the packaging material from in and around the air fryer.
3. Make sure to remove all the accessories from inside the air fryer.
4. Don't remove the safety warning stickers or the rating label from the air fryer.

Clean before use

1. Wipe the interior with a damp cloth. Use a clean, soft cloth to dry.
2. Wash the accessories with hot water and dish soap. Rinse with warm, clear water and use a soft cloth to dry.

Placement

1. Place your Vortex Plus Dual on a stable, level surface, away from combustible material and external heat sources. Do not place your Vortex Plus Dual on top of another appliance.
2. Make sure to leave at least 13 cm of space above and around all sides of the appliance to allow for sufficient air flow.

Test run

Before using your new Vortex Plus Dual for the first time, perform a test run to ensure everything is working correctly.

To perform a test run:

1. Follow the instructions for cooking on page 14.
2. Insert the cooking basket, but do not add food.
3. Select basket 1.
4. The Air Fry programme activates by default.
5. Change the cooking temperature to 205°C.

6. Change the cooking time to 18 minutes.
7. Select basket **2**.
8. The Air Fry programme activates by default.
9. Change the cooking temperature to 205°C.
10. Change the cooking time to 18 minutes.
11. Press **Start** and the air fryer starts the test run.
12. When the display shows **Add Food**, just wait 10 seconds for the programme to resume (do not add any food).
13. When the display shows **Turn Food**, just wait 10 seconds for the programme to resume.
14. After the cooking session is done, let the unit cool.

Now you're ready to cook a meal in your Instant Vortex™ Plus!

COOKING

The Vortex™ Plus uses rapid air circulation to crisp or cook food, giving your meals all the rich, crispy flavour of deep frying, with little to no oil.

⚠ WARNING

HOT SURFACES

The air fryer will be hot during and after cooking. Always exercise extreme caution when removing food from the hot cooking chamber. Touching hot surfaces may result in personal injury, and/or property damage.

MUST ALLOW AIR FLOW

To prevent personal injury, and/or property damage, do not block air intake or air vents.

What to cook in

The cooking basket and cooking tray are perforated to allow air to flow under and around your food, and should be used for most foods, like wings and cauliflower bites.

You can place food right on the cooking tray, without using foil or other coverings.

For the Baking programme only, you can use a metal or glass baking dish to hold things like batter for cakes and dough for breads. Place the baking dish inside the cooking basket for baking.

TROUBLESHOOTING

Problem	Cause	Solution
Air fryer will not turn on	The appliance is not properly plugged in.	Make sure the power cord is plugged into the outlet firmly.
	Outlet is not powered.	Plug another appliance into the same outlet to test the circuit.
	The basket is not fully inserted into the air fryer.	Make sure the basket is fully inserted.
Black smoke is coming from the air fryer	Using an oil with a low smoke point.	Cancel the Smart Programme, unplug the cooker and allow it to cool to room temperature. Choose a neutral oil with a high smoke point.
	Food residue on the heating coil, in the cooking chamber or on the accessories.	Cancel the Smart Programme, unplug the cooker and allow it to cool to room temperature. Remove all accessories from the cooking chamber and clean the cooking chamber and all accessories thoroughly.
	Appliance malfunction.	Contact Customer Care.
White smoke is coming from the air fryer	Cooking foods with a high fat content, such as bacon, sausage, and hamburgers.	Avoid air frying foods with a high fat content. Check the cooking chamber for excess oil and/or fat and carefully remove as needed before air frying.
	Water is vaporising, producing thick steam.	Pat dry moist food ingredients before air frying. Do not add water or other liquid to the cooking chamber when air frying.
	Seasoning on food has blown into element.	Be mindful when seasoning food. Spray vegetables and meats with oil before seasoning to help the seasoning stick.

ERROR CODES

If the control panel displays an error code from this list, there is an issue with the Vortex™ Plus. Here are the actions you should take to fix the problem.

Problem	Cause	Solution
E1	Open circuit.	Contact Customer Care.
E2	Temperature sensor short circuit.	Contact Customer Care.

LEARN MORE

There's a whole world of Instant™ Air Fryer information and help just waiting for you. Here are some of the most helpful resources.

Register your product

instantbrands.co.uk/product-registration

Contact Customer Care

instantbrands.co.uk/support/
UKSupport@instantbrands.com
EUSupport@instantbrands.com
+44 (0) 3331 230051

Instant Brands Connect App with 1000+ recipes

instantbrands.co.uk
iOS and Android app stores

Cooking charts and more recipes

Instant Brands Connect app
instantbrands.co.uk/recipes/

How-to videos, tips and more

 Instant Brands UK

Replacement parts and accessories

instantbrands.co.uk/product-category/instant/

Join the community



Product specifications

Model	Volume	Wattage	Power	Weight	Dimensions
DAF8132BK [Black]	Total 7.5 Litres Each basket 3.7 Litres	1700 W	220- 240V~ 50- 60Hz	7.45 kg	cm: 38.4 L x 40.3 W x 31.7 H
DAF8132SS [Stainless]	Total 7.5 Litres Each basket 3.7 Litres	1700 W	220- 240V~ 50- 60Hz	7.9 kg	cm: 38.4 L x 40.3 W x 31.7 H

WARRANTY

Instant Brands (EMEA) Limited, Instant Brands (Ireland) Limited, and Instant Brands LLC (collectively the "Company") warrant this appliance to be free from defects in workmanship and material, under normal household use, for a period of one (1) year from the date of original purchase. This Limited Warranty extends only to the original purchaser and use of the appliance in the UK and EU. This warranty does not cover appliance use outside of the UK and EU. Proof of original purchase date and, if requested, return of your appliance is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with the written instructions included with the appliance (which are also available at instantbrands.co.uk), the Company will, at its sole discretion, either: (i) repair defects in materials and workmanship; or (ii) replace the appliance. In the event the appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase. The Company is not responsible for shipping costs for warranty service.

Limitation and Exclusions

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and may result in serious injury and damage. Any modification or attempted modification to your appliance or any part thereof will void the warranty, unless such modification(s) or alteration(s) were expressly authorised by the Company.

This warranty does not cover (1) normal wear and tear; (2) damage resulting from negligent, unreasonable or misuse of the appliance, improper assembly or disassembly, use contrary to the operating instructions, failure to provide reasonable and necessary maintenance, Acts of God (such as fire, flood, hurricanes and tornadoes), or repair or alteration by anyone, unless expressly directed and authorised by the Company; and (3) repairs where your appliance is used for other than normal household use and in a manner contrary to published user or operator instructions.

To the extent permitted by applicable law, the liability of the Company, if any, for any allegedly defective appliance or part shall be limited to repair or replacement of the appliance or part thereof, and shall not exceed the purchase price of a comparable replacement appliance. Except as expressly provided herein and to the extent permitted by law, (1) the Company makes no warranties, conditions or representations, express or implied, usage, custom of trade or otherwise with respect to the appliance or parts covered by this warranty and (2) the Company shall not be responsible or liable for indirect, incidental or consequential damages arising out of or in connection with the use or performance of the appliance or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of any nature or kind.

You may have rights and remedies under applicable laws, which are in addition to any right or remedy which may be available under this limited warranty.

Please visit instantbrands.co.uk/product-registration/ to register your appliance. You will be asked to provide your name, your email address, the store name, date of purchase, model number and serial number (both of which are found on the appliance). This registration will enable us to keep you up-to-date with product developments and recipes, and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understood the instructions for use and warnings accompanying the appliance.

WARRANTY SERVICE

To obtain warranty service, please contact our Customer Care Department by creating a support ticket online at [Instantbrands.co.uk/support/](https://instantbrands.co.uk/support/). If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Brands is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.

Within the UK:

Instant Brands (EMEA) Limited, 1
Christchurch Way, Woking, Surrey,
GU21 6JG, UK.

Email: UKSupport@instantbrands.com

Telephone: +44 (0) 3331 230051

Within the EU:

Instant Brands (Ireland) Limited, Suite
6, Rineanna House, Shannon Free Zone,
Shannon, Co Clare, Ireland, V14 CA36.

Email: EUSupport@instantbrands.com

Telephone: +44 (0) 3331 230051

This warranty was last updated on 1 September 2019 for all products sold from [1 November 2019]. If your product comes with our older warranty version, your warranty will continue to be honoured.

Recycling

This appliance complies with the WEEE Directive 2012/19/EU on the disposal of electrical and electronic equipment (WEEE). This appliance complies with the European directive for electromagnetic compatibility (EMC) 2014/30/EU and its revisions, as well as Low Voltage Directive (LVD) 2014/35/EU and its revisions. This marking indicates that this product should not be disposed of with other household waste throughout the UK and EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material sources. To return your used device, please use the return and collection systems or contact Customer Care for further recycling and WEEE information.



Instant Brands (EMEA) Limited

1 Christchurch Way, Woking, Surrey,
GU21 6JG, UK

Instant Brands (Ireland) Limited

Suite 6, Rineanna House, Shannon
Free Zone, Shannon, Co Clare,
Ireland, V14 CA36

[instantbrands.co.uk](https://www.instantbrands.co.uk)

© 2022 Instant Brands LLC
888-0119-41