get started

INSTANT™ **VORTEX™ PLUS 5.7L** med **CLEARCOOK**

og

INSTANT™ **VORTEX™ PLUS 5.7L** med **CLEARCOOK** og **ODOURERASE**

BRUGERMANUAL

Instant™

velkommen

til din nye Instant™ Vortex™ Plus!

Instant Vortex Plus Airfryer hjælper dig med at tilberede lækre måltider med mindre olie og mindre besvær. Vi håber, at du bliver forelsket i Instant airfrying og får glæde af den i dit køkken i mange år fremover!

Kom godt i gang med din **Vortex Plus** og **ClearCook!** (engelsk)

Kom godt i gang med din **Vortex Plus** med **ClearCook and OdourErase!**(engelsk)

⚠ ADVARSEL

Før du tager din nye Vortex Plus i brug, skal du læse alle instruktioner, herunder sikkerhedsinstruktionerne og garantien. Hvis du ikke følger sikkerhedsforanstaltningerne og instruktionerne, kan det medføre personskade og/eller materielle skader.



Illustrations are for reference only and may differ from the actual product.

USING YOUR VORTEX™ PLUS

Control panel

We've designed the control panel to be simple to use and easy to read.

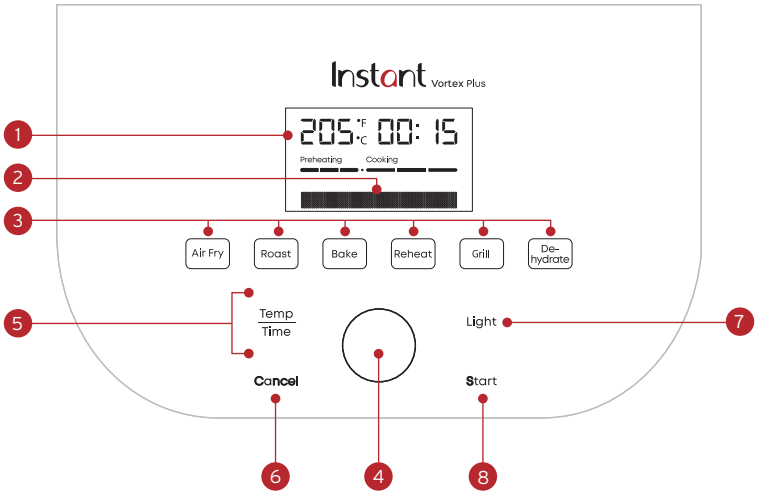

1. Time/Temperature
   - Cooking time
   - Cooking temperature
2. LCD message bar: showing cooking status and reminder message
3. Smart Programmes
   - Air Fry
   - Roast
   - Bake
   - Reheat
   - Grill
   - Dehydrate
4. Control Dial
   - Used to select time and temperature
5. Temperature and time
6. Cancel
7. Light
   - Turn on or off the internal cooking light
8. Start

Turning cooking light On/Off

- To turn the light on, press **Light**.
- To turn the light off, press **Light** again. The cooking light cannot be turned off in the last 60 seconds of a cooking programme.

Turning sound On/Off

- While in Standby mode, press and hold **Temp/Time** and **Light** for 5 seconds, until the display shows **Sound Off** or **Sound On**.

Audible safety alerts (beeps) cannot be turned off.

Choosing temperature unit

Choose which cooking temperature unit you would like to use, Fahrenheit or Celsius.

- While in Standby mode, press and hold **Temp/Time** for 5 seconds, until display shows °F or °C.

Save custom settings

You can set and save custom time and temperature settings for any of the six *Smart Programmes*.

1. Select the Smart Programme you want to set.
2. Press **Temp/Time** button and use the Control Dial to change the temperature or time.
3. Press **Start** button to confirm change.

The next time you use that Smart Programme the new temperature or time is used. Adjustments made after cooking begins are not saved.

Reset Smart Programmes to original settings

Reset individual Smart Programmes

- With the cooker in Standby mode, press and hold one of the Smart Programme buttons until the cooker returns to Standby.

Reset all Smart Programmes

- With the cooker in Standby mode, press and hold the **Control Dial** until the cooker beeps.

All Smart Programme cooking times and temperatures are restored to the factory default setting.

Cancel active cooking programme

You can cancel any cooking programme at any time.

- While in Standby, Preheating or active cooking programme, press **Cancel**. Depending on the temperature of the unit, the internal fan may keep running to cool the unit.

INITIAL SETUP

Unpack

1. Remove your new Vortex™ Plus from the box.
2. Remove all the packaging material from in and around the air fryer.
3. Make sure to remove all the accessories from inside the cooking chamber.
4. Don't remove the safety warning stickers or the rating label from the air fryer.

Clean before use

1. Wipe the interior with a damp cloth. Use a clean, soft cloth to dry.
2. Wash the accessories with hot water and dish soap. Rinse with warm, clear water and use a soft cloth to dry.

Placement

1. Place your Vortex Plus on a stable, level surface, away from combustible material and external heat sources. Do not place your Vortex Plus on top of another appliance.
2. Make sure to leave at least 13 cm of space above and around all sides of the appliance to allow for sufficient air flow.

Test run

Before using your new Instant Vortex™ Plus for the first time, you must perform a test run to ensure everything is working correctly.

To perform a test run:

1. Follow the instructions for cooking on page 14.
2. Insert the cooking basket, but do not add food.
3. Select the Air Fry programme.
4. Select the cooking temperature (205°C).
5. Select the cooking time (18 minutes).
6. When the display shows **Add Food**, just remove and reinsert the cooking basket (do not add any food).
7. When the display shows **Turn Food**, wait 10 seconds for the programme to resume.
8. After the cooking programme ends, allow the unit to cool down.

Now you're ready to cook a meal in your Instant Vortex Plus!

COOKING

The Vortex™ Plus uses rapid air circulation to crisp or cook food, giving your meals all the rich, crispy flavours of deep frying, with little to no oil.

⚠ ADVARSEL

HOT SURFACES

The air fryer oven will be hot during and after cooking. Always exercise extreme caution when removing food from the hot cooking chamber. Touching hot surfaces may result in personal injury, and/or property damage.

MUST ALLOW AIR FLOW

To prevent personal injury, and/or property damage, do not block air intake or air vents.

What to cook in

The cooking basket with cooking tray is perforated to allow air to flow under and around your food, and should be used for most foods, like wings and cauliflower bites.

For the Baking programme only, you can use a metal or glass baking dish to hold things like batter for cakes and dough for breads. Place the baking dish inside the cooking basket for baking.

You can place food right on the cooking tray, without using foil or other coverings.

Prep

Cut, chop, season, marinate or batter your ingredients according to your recipe.

Cook

1. Place your food into the air frying basket, according to your recipe.
2. Insert the air frying basket into the cooker.

   When the air frying basket is inserted securely, the front of the basket is flush with the front of the cooker.

3. Press **Air Fry**.
4. Press **Temp/Time** to adjust the temperature and cooking time.
5. Press **Start** to begin. The display shows **Preheating** to indicate that the cooking programme has started.

See page 16 to adjust Smart Programme settings.

Add food

1. When the cooker passes the preheating phase, the display shows **Add Food**.
2. Remove the basket, and carefully insert your food into the basket.
3. Reinsert the air frying basket into the cooker and the cooking countdown timer starts.

Turn

1. Part way through the cooking cycle the display shows **Turn Food**.
2. Remove the air frying basket from the unit and carefully turn, flip, or rotate your food.

   *If you do not remove the basket after **Turn Food** displays, cooking will proceed after 10 seconds.*
3. Insert the air frying basket into the cooker. Cooking continues.

Finish

- When the Smart Programme completes, the appliance beeps, and the display shows **End**.

  *The "Food-Ready" beep will come up 1 minute after **End** (10 beeps in 10 minutes total) if the basket is not open.*

SMART PROGRAMMES

Air Fry

You can air fry foods like fries, cauliflower bites, wings, nuggets and more.

Setting	Default	Minimum	Maximum
Temperature	196°C	82°C	205°C
Cooking Time	15 minutes (00:15)	1 minute (00:01)	1 hour (01:00)

To air fry

- Follow the basic instructions for Air Frying.
- Select "Air Fry" as the Smart Programme.

Roast

You can roast foods like beef, lamb, pork, poultry, vegetables and scalloped potatoes, for a deliciously tender inside and browned outside.

Setting	Default	Minimum	Maximum
Temperature	193°C	82°C	205°C
Cooking Time	18 minutes (00:18)	1 minute (00:01)	1 hour (01:00)

To roast

- Follow the basic instructions for Cooking.
- Select "Roast" as the Smart Programme.

Bake

You can bake foods like breads, cakes, pastries and buns, with the Vortex™ Plus as your own "mini oven".

Setting	Default	Minimum	Maximum
Temperature	185°C	82°C	205°C
Cooking Time	30 minutes (00:30)	1 minute (00:01)	1 hour (01:00)

To bake

- Follow the basic instructions for Cooking.
- Select "Bake" as the Smart Programme.
- There is no need to turn the food partway through cooking.

  Leave approximately 2.5 cm of space around all sides of the baking dish to allow heat to circulate evenly.

Grill

Grilling cooks using direct top-down heating, perfect for melting cheese on French onion soup, and nachos.

Setting	Default	Minimum	Maximum
Temperature	205°C	177°C	205°C
Cooking Time	6 minutes (00:06)	1 minute (00:01)	40 minutes (00:40)

To grill

- Follow the basic instructions in Cooking.
- Select "Grill" as the Smart Programme.
- There is no need to turn the food partway through cooking.

Dehydrate

Dehydrating uses low heat over a long period of time to safely dry out food items, like dried fruit, jerky and dried veggies.

Setting	Default	Minimum	Maximum
Temperature	54°C	35°C	79°C
Cooking Time	8 hours (08:00)	1 hour (01:00)	72 hours (72:00)

To dehydrate

- Follow the basic instructions in Cooking.
- Select "Dehydrate" as the Smart Programme.
- There is no need to turn the food partway through cooking.

Reheat

Bring the crisp and crunch back to leftover chips, pizza and stale bread, in just a few minutes.

Setting	Default	Minimum	Maximum
Temperature	138°C	49°C	182°C
Cooking Time	10 minutes (00:10)	1 minute (00:01)	1 hour (01:00)

To reheat

- Follow the basic instructions for Cooking.
- Select "Reheat" as the Smart Programme.

  Once this Smart Cooking function starts, the display will show the target temperature and cooking time immediately, there's no preheating time.

CLEANING

Clean your Vortex™ Plus after each use. Always unplug the unit and let all parts cool to room temperature before cleaning. Before use or storing, make sure all surfaces are dry.

⚠ ADVARSEL

To prevent electric shock, unplug before cleaning.

DO NOT immerse power cord, plug or the appliance in water or other liquid, which may result in electric shock.

Part	Cleaning instructions
Cooking tray	• Dishwasher safe.* • The cooking trays have a non-stick coating. Avoid using metal utensils when cleaning.
Removable air frying basket	• Clean with a sponge or cloth and warm water and dish soap, then rinse well. Ensure that all grease and food debris are removed. • After cooking, wait to wash the basket until it returns to room temperature. This will reduce fogging of the ClearCook windows. • If water is trapped in a ClearCook window after cleaning, it will need time to evaporate. This could take up to 24 hours. Running the basket in a short cooking cycle will speed up this process. • The baskets have a non-stick coating. Avoid using metal utensils when cleaning.
Cooking chamber	• Clean with a damp cloth and mild dish soap. • Always check the heating coil and cooking chamber walls for oil spatter and food debris, and clean as needed. • Ensure the heating coil is dry before turning on the air fryer. • To remove baked-on grease and food residue from the cooking chamber, spray with a mixture of baking soda and vinegar and wipe clean with damp cloth. For stubborn stains, allow the mixture to sit on the affected area for several minutes before scrubbing clean.
Power cord	• Clean with a soft, damp cloth or sponge. Wipe dry.

**Some discolouration may occur after machine washing, but this will not affect the cooker's safety or performance.*

REPLACING ODOURERASE FILTERS

(for OdourErase model only)

Visit **instantbrands.co.uk** to purchase compatible filters designed to work with your unit.

When it's time to replace the OdourErase filter, the display will show **Change Filter**.

1. Unplug the Vortex™ Plus from the electrical outlet.
2. Lift the filter housing up, from the top of the unit.
3. Remove the old filters and dispose of them properly. The filters are not recyclable.
4. Remove two (2) new filters from packaging and insert them into the filter housing.
5. Insert the filter housing back into the unit and plug the cooker back into the electrical outlet.
6. Press the buttons "Bake" and "Reheat" together **for up to 10 seconds** to reset the filter. The filter LED on the top panel of the machine will be off. Now you're ready to cook.
7. The OdourErase filters will automatically begin reducing odours while you cook.

TROUBLESHOOTING

Problem	Cause	Solution
Air fryer will not turn on	The appliance is not properly plugged in.	• Make sure the power cord is plugged into the outlet firmly.
	Outlet is not powered.	• Plug another appliance into the same outlet to test the circuit.
	The oven door is open.	• Make sure the door is fully closed.
Black smoke is coming from the air fryer	Using an oil with a low smoke point.	• Cancel the Smart Programme, unplug the cooker and allow it to cool to room temperature. • Choose a neutral oil with a high smoke point.
	Food residue on the heating coil, in the cooking chamber or on the accessories.	• Cancel the Smart Programme, unplug the cooker and allow it to cool to room temperature. • Remove all accessories from the cooking chamber and clean the cooking chamber and all accessories thoroughly.
	Appliance malfunction.	• Contact Consumer Care.
White smoke is coming from the air fryer	Cooking foods with a high fat content, such as bacon, sausages, and hamburgers.	• Avoid air frying foods with a high fat content. Check the cooking chamber for excess oil and/or fat and carefully remove as needed before air frying.
	Water is vaporising, producing thick steam.	• Pat dry moist food ingredients before air frying. • Do not add water or other liquid to the cooking chamber when air frying.
	Seasoning on food has blown into element	• Be mindful when seasoning food. Spray vegetables and meats with oil before seasoning to help the seasoning stick.

ERROR CODES

If the control panel displays an error code from this list, there is an issue with the Vortex™ Plus. Here are the actions you should take to fix the problem.

Problem	Cause	Solution
E1	Open circuit.	• Contact Consumer Care.
E2	Temperature sensor short circuit.	• Contact Consumer Care.

PRODUCT SPECIFICATIONS

Model	Volume	Wattage	Power	Weight	Dimensions
AFB6132BK	5.7 Litres	1450-1700W	220-240 V ~50/60 Hz.	5.15 kg	cm: 39.3 D x 30 W x 30 H

LEARN MORE

There's a whole world of Instant Air Fryer information and help just waiting for you. Here are some of the most helpful resources.

Register your product

instantbrands.co.uk/product-registration/

Contact Consumer Care

instantbrands.co.uk
UKSupport@instantbrands.com
EUSupport@instantbrands.com
+44 (0) 3331 230051

Instant Brands Connect App with 1000+ recipes

instantbrands.co.uk
iOS and Android app stores

Cooking timetables and more recipes

instantbrands.co.uk/recipes/

How-to videos, tips and more

Instant Brands UK

Replacement parts and accessories

instantbrands.co.uk/product-category/instant/

Join the community

WARRANTY

Instant Brands (EMEA) Limited, Instant Brands (Ireland) Limited, and Instant Brands LLC (collectively the "Company") warrant this appliance to be free from defects in workmanship and material, under normal household use, for a period of one (1) year from the date of original purchase. This Limited Warranty extends only to the original purchaser and use of the appliance in the UK and EU and must be purchased by an authorised distributor of Instant Brands. This warranty does not cover appliance use outside of the UK and EU.

Proof of original purchase date and, if requested, return of your appliance is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with the written instructions included with the appliance (which are also available at instantbrands.co.uk), the Company will, at its sole discretion, either: (i) repair defects in materials and workmanship; or (ii) replace the appliance. In the event the appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase (UK only).

The Company is not responsible for shipping costs for warranty service.

Limitation and Exclusions

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and may result in serious injury and damage. Any modification or attempted modification to your appliance or any part thereof will void the warranty, unless such modification(s) or alteration(s) were expressly authorised by the Company.

This warranty does not cover (1) normal wear and tear; (2) damage resulting from negligent, unreasonable or misuse of the appliance, improper assembly or disassembly, use contrary to the operating instructions, failure to provide reasonable and necessary maintenance, Acts of God (such as fire, flood, hurricanes and tornadoes), or repair or alteration by anyone, unless expressly directed and authorised by the Company; and (3) repairs where your appliance is used for other than normal household use and in a manner contrary to published user or operator instructions.

To the extent permitted by applicable law, the liability of the Company, if any, for any allegedly defective appliance or part shall be limited to repair or replacement of the appliance or part thereof, and shall not exceed the purchase price of a comparable replacement appliance. Except as expressly provided herein and to the extent permitted by law, (1) the Company makes no warranties, conditions or representations, express or implied, usage, custom of trade or otherwise with respect to the appliance or parts covered by this warranty and (2) the Company shall not be responsible or liable for indirect, incidental or consequential damages arising out of or in connection with the use or performance of the appliance or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of any nature or kind.

You may have rights and remedies under applicable laws, which are in addition to any right or remedy which may be available under this limited warranty.

Please visit instantbrands.co.uk/product-registration/ to register your appliance. You will be asked to provide your name, your email address, the store name, date of purchase, model number and serial number (both of which are found on the appliance). This registration will enable us to keep you up-to-date with product developments and recipes, and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understood the instructions for use and warnings accompanying the appliance.

Warranty Service

Your name, email address or phone number. A copy of the original purchase receipt with order number, model and serial number. A description of the product defect, including any photographs or video if possible.

Warranty Registration

Within the UK

Instant Brands (EMEA) Limited, 1 Christchurch Way, Woking, Surrey, GU21 6JG, UK.

Email: UKSupport@instantbrands.com

Telephone: +44 (0) 3331 230051

Within the EU

Instant Brands (Ireland) Limited, Suite 6, Rineanna House, Shannon Free Zone, Shannon, Co Clare, Ireland, V14 CA36.

Email: EUSupport@instantbrands.com

Telephone: +44 (0) 3331 230051

This warranty was last updated on 1 September 2019 for all products sold from [1 November 2019]. If your product comes with our older warranty version, your warranty will continue to be honoured.

Recycling

This appliance complies with the WEEE Directive 2012/19/EU on the disposal of electrical and electronic equipment (WEEE). This appliance complies with the European directive for electromagnetic compatibility (EMC) 2014/30/EU and its revisions, as well as Low Voltage Directive (LVD) 2014/35/EU and its revisions. This marking indicates that this product should not be disposed of with other household waste throughout the UK and EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material sources. To return your used device, please use the return and collection systems or contact Customer Care for further recycling and WEEE information.

Instant Brands (EMEA) Limited
1 Christchurch Way, Woking, Surrey,
GU21 6JG, UK

Instant Brands (Ireland) Limited
Suite 6, Rineanna House, Shannon
Free Zone, Shannon, Co Clare,
Ireland, V14 CA36

instantbrands.co.uk

© 2022 Instant Brands LLC
889-0119-31